



A	6.0*4.4 	SONY: GPAC10V1;ADP-30KH;PCGA-AC16V1,PCGA-AC16V3,VAIOPCG-505,PCG-Z1AP1; PCGA-AC16V1,PCGA-AC16V3,VAIO PCG-505,PCG-Z1AP1;CGA-AC19V1 for VAIO PCG-700 VAIO PCG-Z505 VAIO F-Series;VGP-AC19V43;VGP-Ac19v20;PCG-GRS Series: GRS50/B, GRS55/B, GRS52V/P, GRS70/P, GRS72, GRS75, GRS100, GRS150, GRS500, GRS500P, GRS600, GRS700, GRS900, GRS900P FUJITSU: Fujitsu Lifebook 500 Lifebook 1200 Lifebook 270DX Lifebook 280DX ; Lifebook 3700X Lifebook 400 Series
B	6.3*3.0 	TOSHIBA: Satellite 1800 1805 Series: 1800-S252,1805-S203,1805-S204, 1805-S253; PA30920-1A1C; PA3755U-1ACA PA3378U-1ACA PA3201U-1ACA;
C	5.5*2.5 	HP: F4600a, F4814a,PA3432U-1ACA DELL: D069P;B120 B130 2200 TOSHIBA: Toshiba NB200 NB021 NB205 Notebook; Portege Z830-BT8300 S8301 S8302 z835 ;PA3467U-1ACA PA3468U-1ACA FUJITSU: at300 PA-1650-21 ASUS: ADP-40PH AB;PA-1650-78,PA-1900-24;asus k50ij k52f k53u k55 a52f u47a u50a u52f u56e u57a u81a ul30a s46ca s56ca x44h r503 r510 r554 x555 LENOVO: Lenovo IdeaPad S9 S10 series; Y466 V460 G460 Z460 Z360 //E290 E390 E680 E41G E42G E43L; G460G470Y450Y460Y470 //F41 Y450 Y470 G470
D	3010 	ACER: ASPIRE S3-951-6464, S3-951-6675S3-951-6828, S5 ULTRABOOK; ASPIRE S3-951-6464, S3-951-6675S3-951-6828, S5 ULTRABOOK; ACER A100, A200, A500, A501, A110, A100, A211 SWITCH10 ASUS: Asus 45w ux21, ux31, ux31e, ux31k; Asus Eee Slate EP121,EP121-1A019M; Samsung: Samsung 900X3A-A01, NP530U3B-A01US, NP530U3B-A02US NP530U4B; 900X3A-A01, NP530U3B-A01US, NP530U3B-A02US, NP530U4B

F	4.8*1.7 	HP: HP Mini FOLIO13 Series;PA-1650-32HL LG:PA-1650-02 PA-1650-01
H	5.5*3.0 	SAMSUNG: NC10, N110, N130, N140, N150, N210, N210, N510, cpa09-004a, R25 R18, R700, R18, R58, R26, R23, R70, R20, R50, R39, R55, R65
I		DC universal plug.
K	7.9*5.4 	LENOVO: ThinkPad X60 Series, ThinkPad T60, Type 1951, Model 44x Series; R400, R500, SL300, SL400, SL410, SL410K, SL500, SL510, T400 14" WIDE, T430, T430S, T430U, T500, T510, T510I, T520, T530, W500, W510, X140E. ThinkPad Edge series 11, 11 ", 12.5", 13, 13 ", 14, 14", 15, 15 ", 15.6", E10, E120, E220S, E30, E420, E420, E525, E545 Lenovo 40Y7711, 42T5275; 3000 series 3000, C100, N100, N200, V100, IBM ADVANCED MINI DOCK T, ESSENTIAL PORT REPLICATOR, EXTERNAL BATTERY CHARGER, R60, T60, X60, Z60, Z60M, Z60T, Z61E, Z61M, Z61P,
M		LENOVO: Thinkpad T431S, X230S, X240s, X240, 45W; yoga13 x1 G500, G505, G400, G405; LENOVO Thinkpad X1 Carbon
O	4.5*3.0	HP: HSTNN-LA40, 741727-001, 740015-001, HP Pavilion 15-p001tx, 15-p; PA-1650-32HK, 677770-003; Pavilion15-e029TX
FOR DELL		DELL: PA-10 HP: PPP009L, PPP009L-E, PPP009H, DC359A
FOR HP		HP Mini 5101 5102

NOTICE! Pay attention to the voltage, and make sure the correct voltage has been selected on the device before connecting your laptop. A wrong setting can cause damage to your laptop.